

# Door Levers

Two classic 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




RH shown

▲ 7741



▲ with 49 series multipoint plate

▲ shown with **7844B** rosette

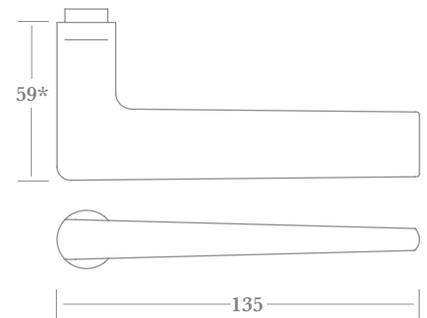


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

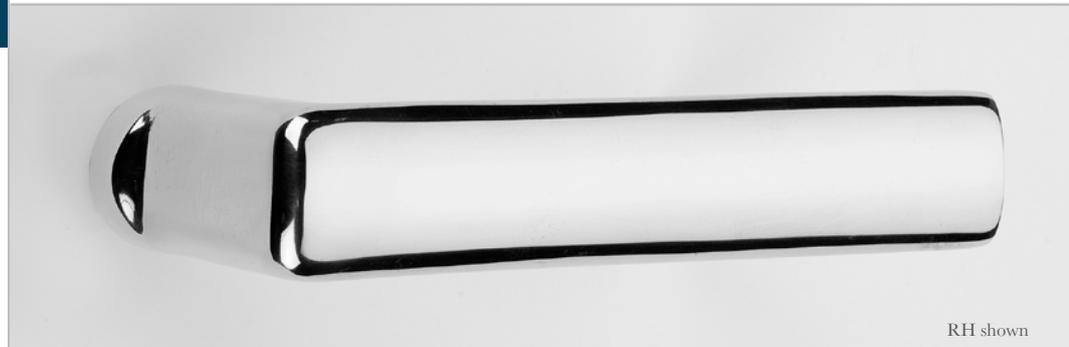


RH shown

▲ 7742



▲ with 49 series multipoint plate


▲ shown with **7845B** rosette

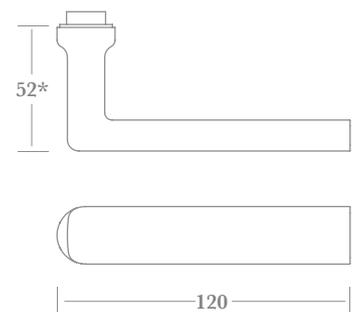

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two Art Deco inspired contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.

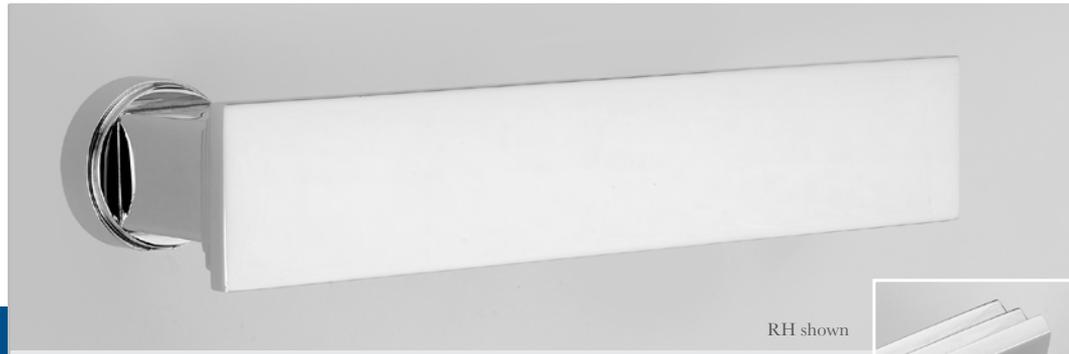


RH shown

▲ 7729



▲ shown with 3261A plate

▲ shown with 7842B rosette

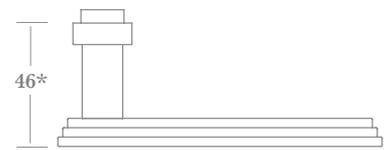


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

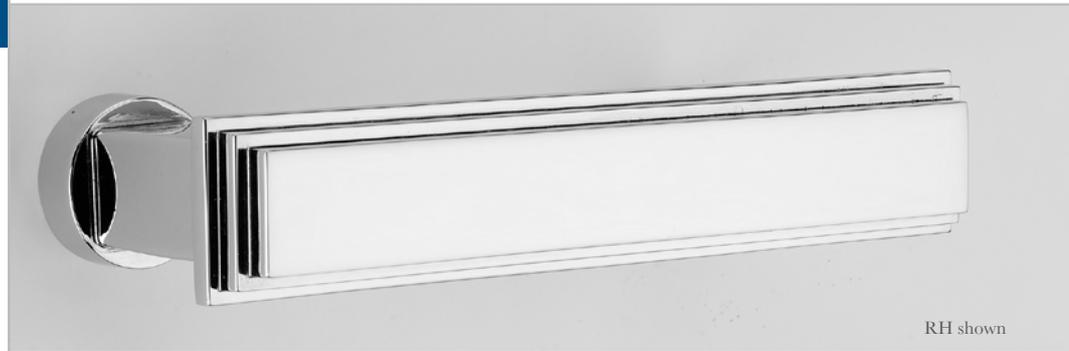



RH shown

▲ 7728



▲ shown with 5927C/R03 plate

▲ shown with 7842A rosette

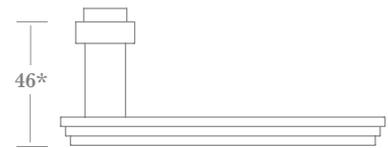


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


# Door Levers

Two classic Art Deco period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

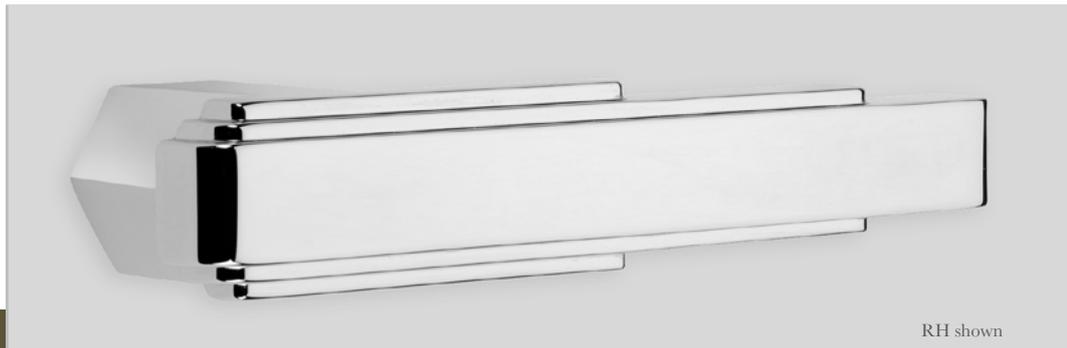


▲ 7732 (round edge design)

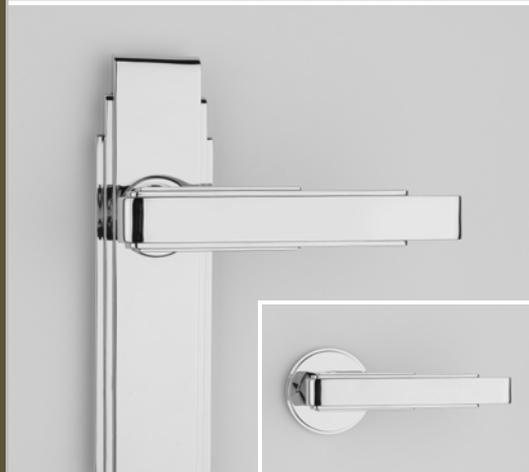


▲ shown with 6811A plate


▲ shown with 7842B rosette

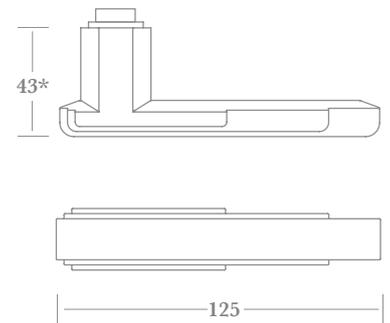

\* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).

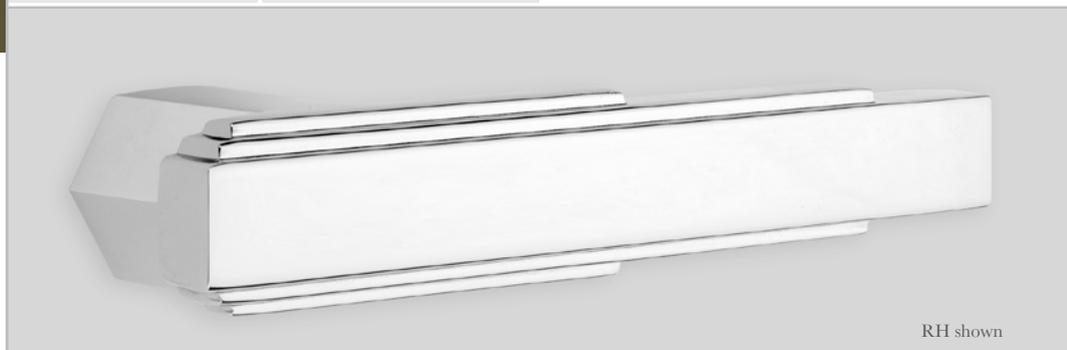


▲ 7734 (square edge design)

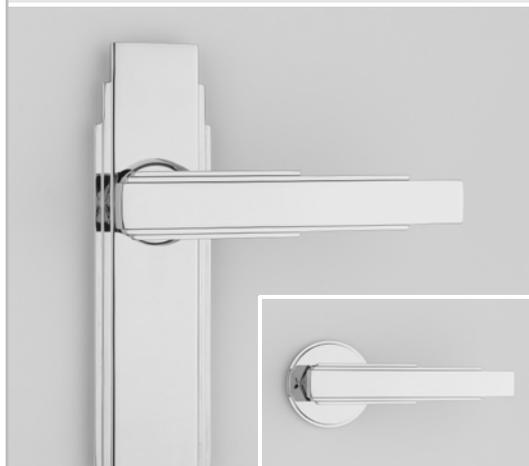

▲ shown with 6711A plate

▲ shown with 7842B rosette

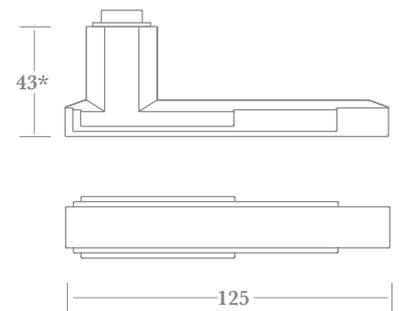

\* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).

## Fixings


Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

# Door Levers

Two traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

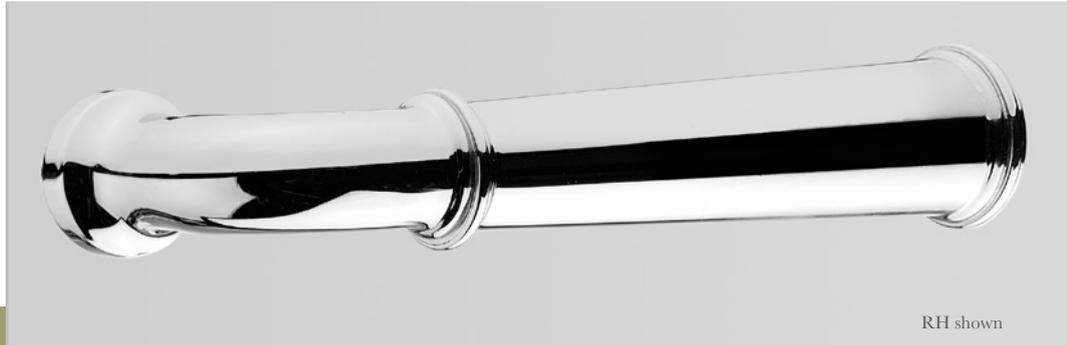


RH shown

▲ 7774



▲ shown with 6011A plate

▲ shown with 7847B rosette

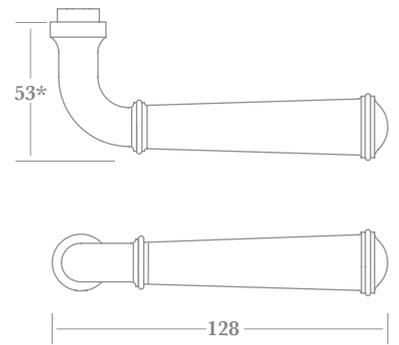


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

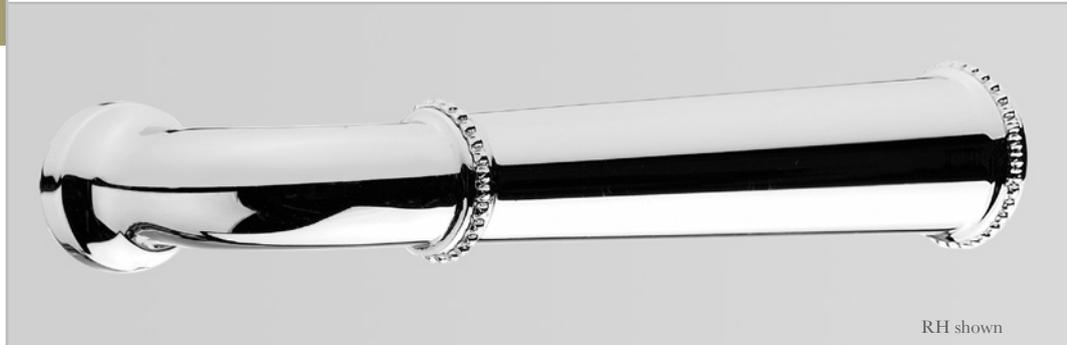


RH shown

▲ 7775



▲ shown with 6011A plate

▲ shown with 7847B rosette

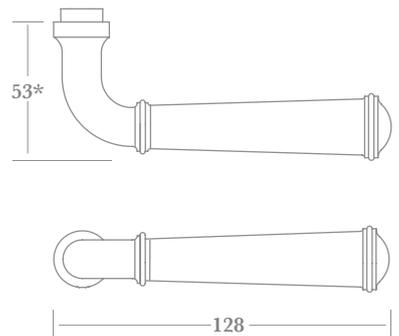

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Three traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




RH shown

▲ 7769



RH shown

▲ 7770

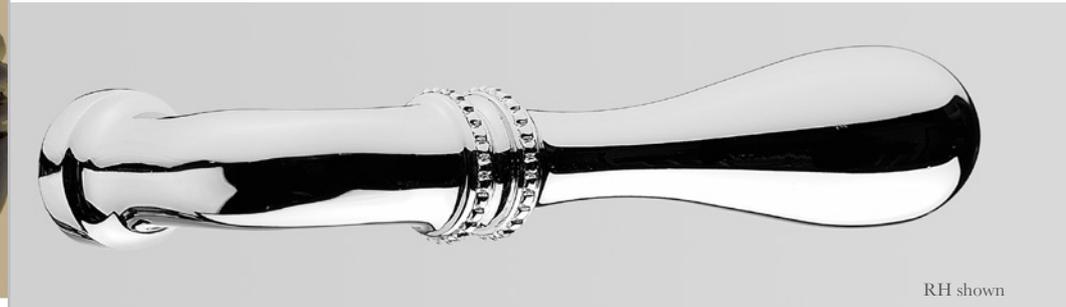

RH shown

▲ 7771

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.



▲ 7770 shown with 6011A plate



▲ 7770 shown with 7834B rosette



▲ 7769 shown with 7827B rosette



▲ 7771 shown with 7847B rosette

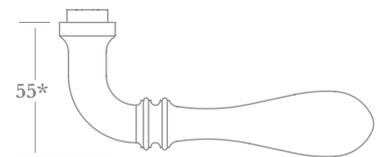


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

One traditional period, and one 1960's inspired, Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

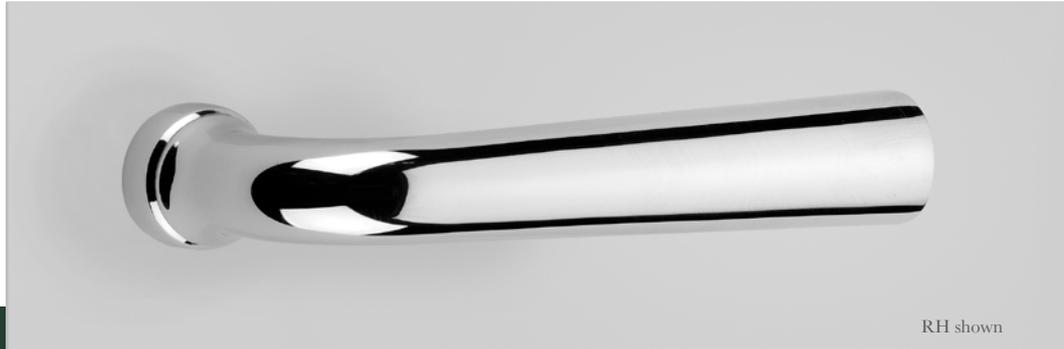


RH shown

▲ 7706



▲ with 49 series multipoint plate

▲ shown with 5951B rosette

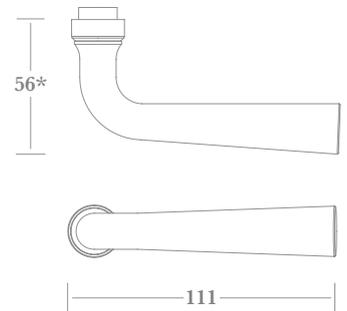


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

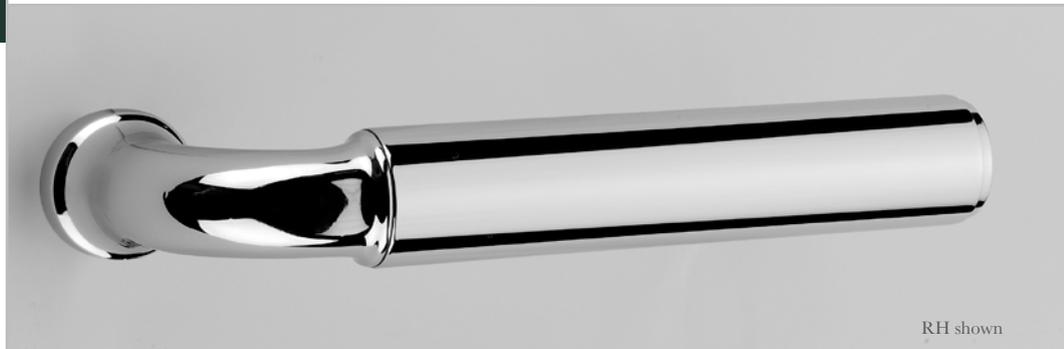


RH shown

▲ 7773



▲ with 49 series euro-profile lock plate

▲ shown with 7843B rosette

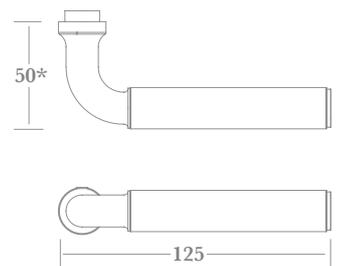


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Whilst very similar in design, the 7716 is much slimmer and lighter than it's chunky and weightier brother, the 7717.

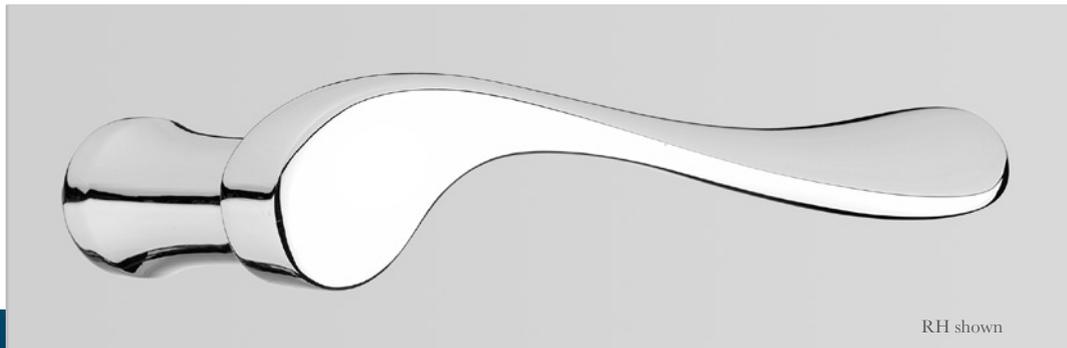


RH shown

▲ **7716** (light design - single lever 230g)



▲ shown with **5911A** plate

▲ shown with **7834B** rosette

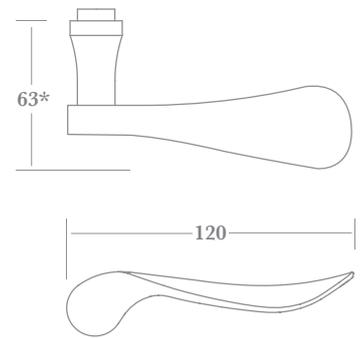


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

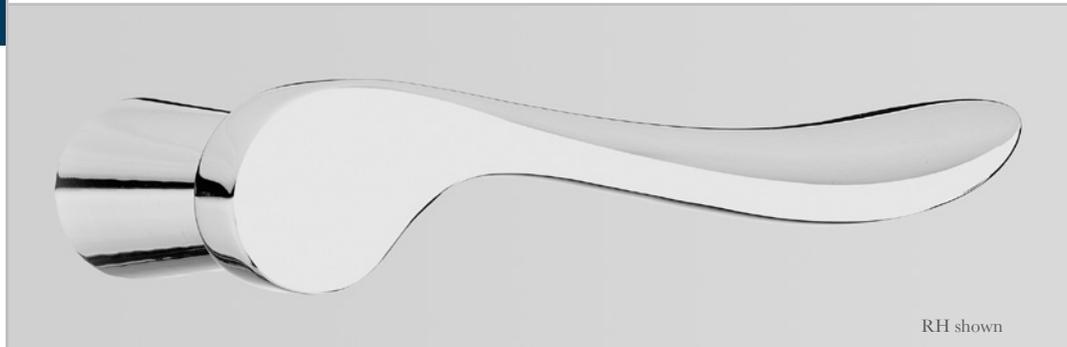


RH shown

▲ **7717** (heavy design - single lever 360g)



▲ shown with **4711A** plate

▲ shown with **7843B** rosette

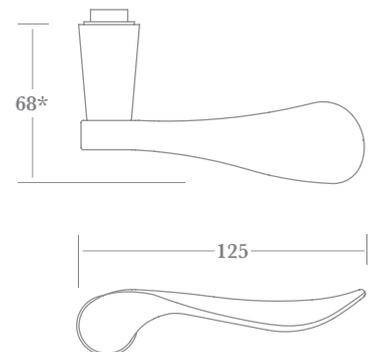


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

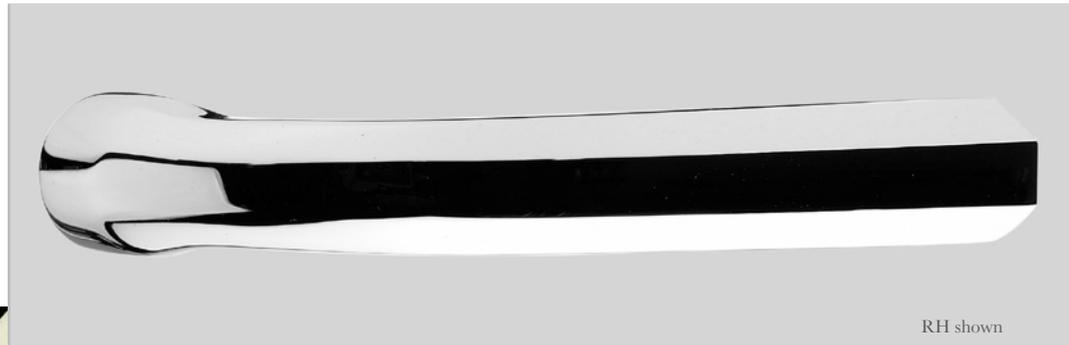


RH shown

▲ 7778



▲ shown with 4711A plate

▲ shown with 7844B rosette

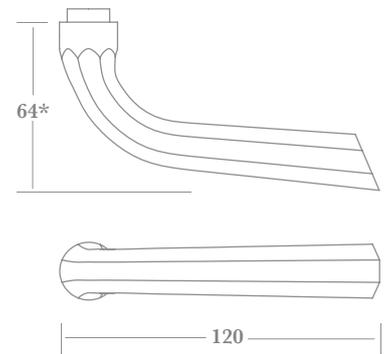


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

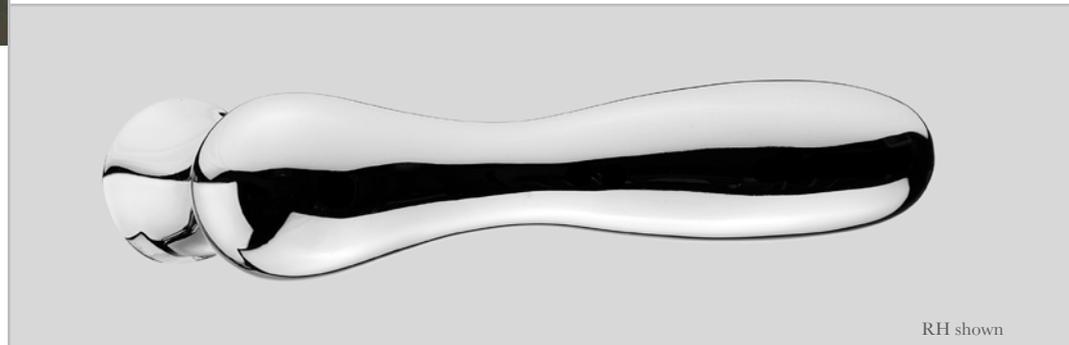


RH shown

▲ 7772



▲ shown with 4711A plate

▲ shown with 7845B rosette

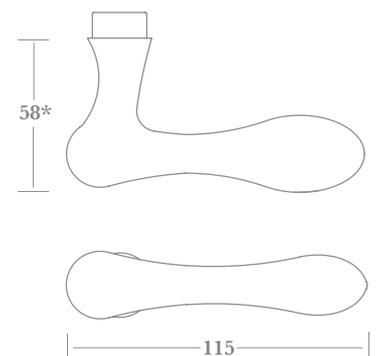


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers


Two 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

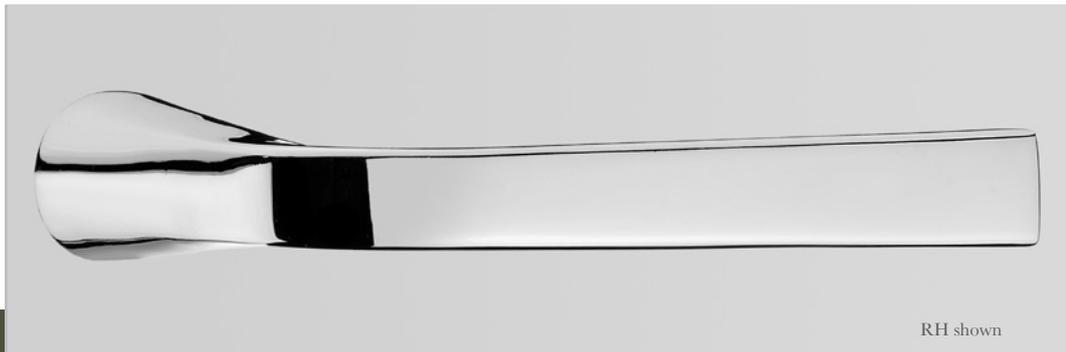

RH shown

▲ 7733

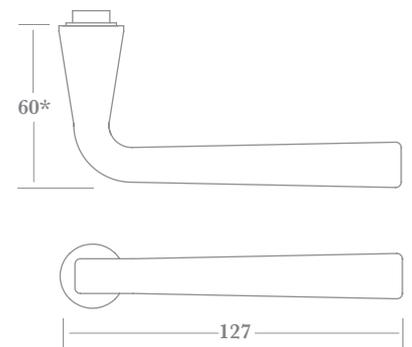

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


▲ shown with 4711A plate

▲ shown with 7843B rosette

## Fixings


Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

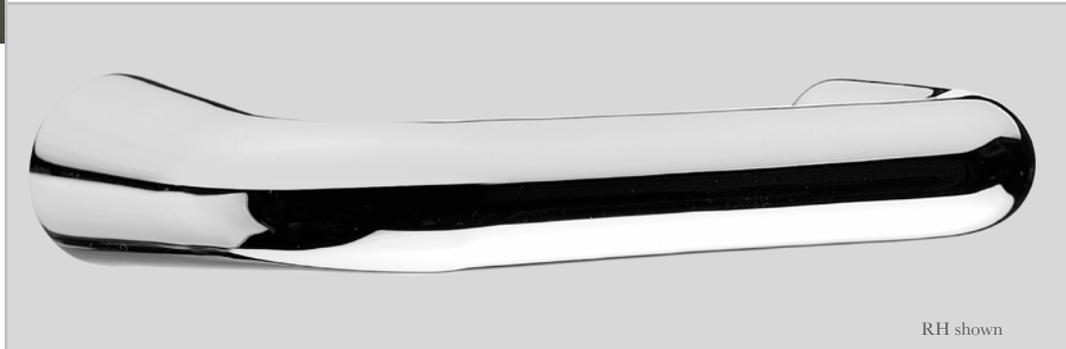

RH shown

▲ 7776

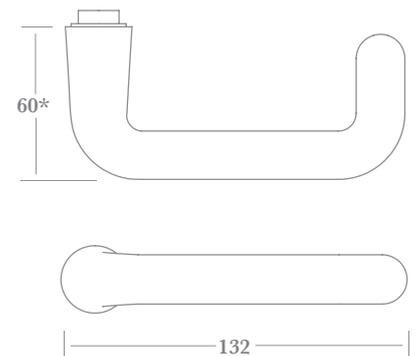

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


▲ shown with 6011A plate

▲ shown with 7847B rosette

# Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

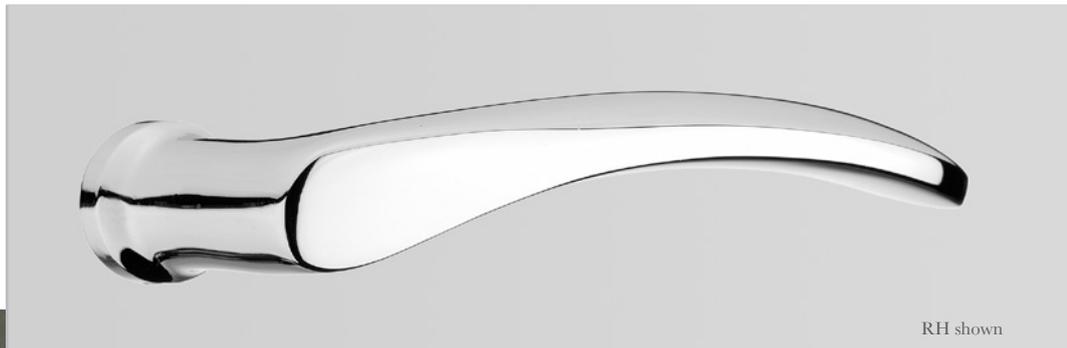


RH shown

▲ 7710



▲ shown with **5911A** plate

▲ shown with **7844B** rosette

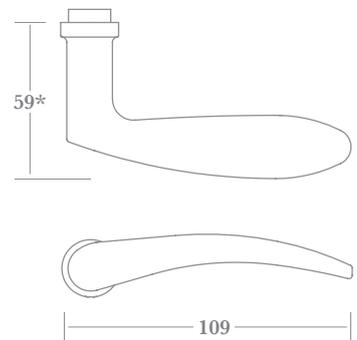


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings


Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

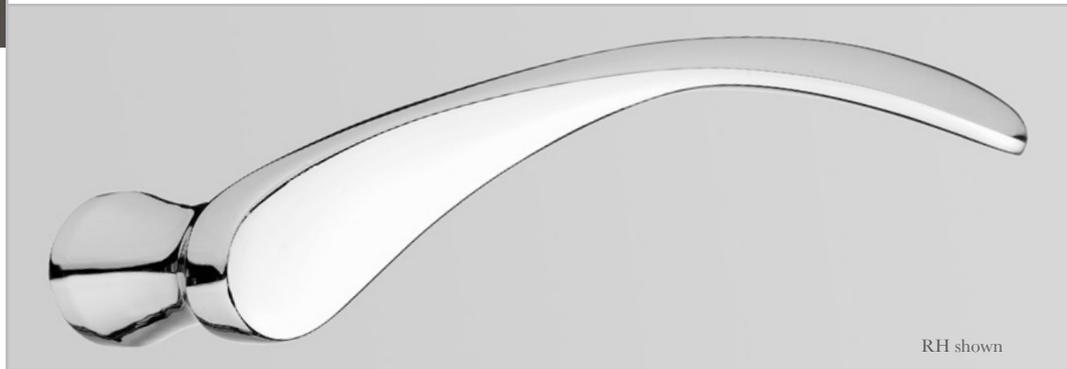


RH shown

▲ 7714

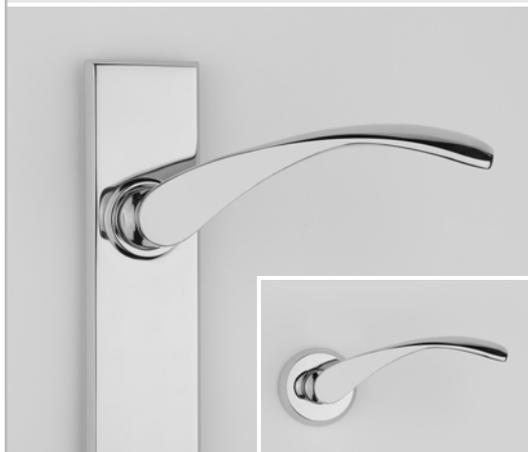

▲ shown with **4711A** plate

▲ shown with **7844B** rosette

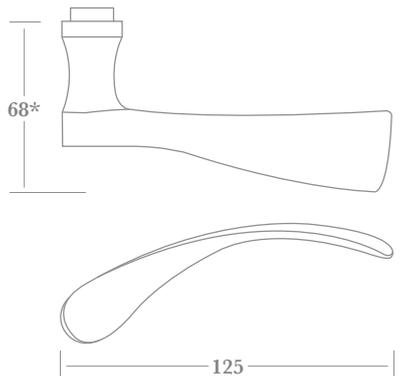

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

One Art Deco and one 1950's period Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




RH shown

▲ 7731



▲ shown with **6611A** plate

▲ shown with **7841B** rosette

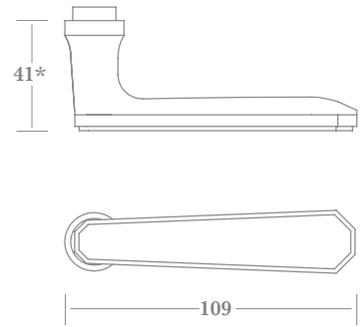


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

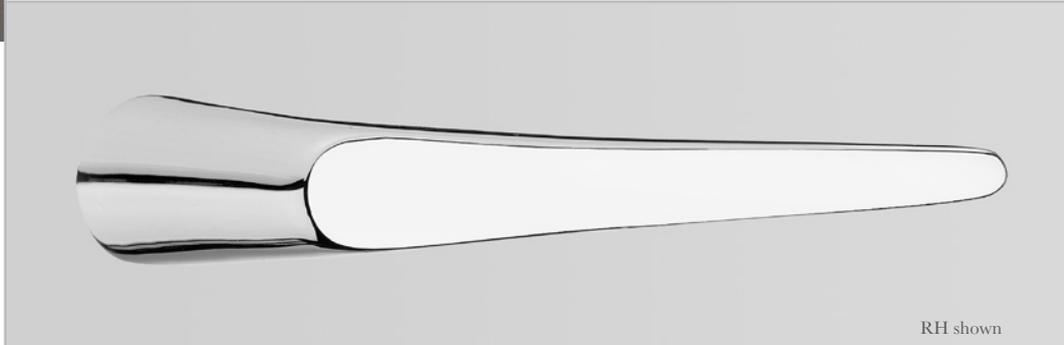


RH shown

▲ 7740



▲ shown with **5911A** plate

▲ shown with **7844B** rosette

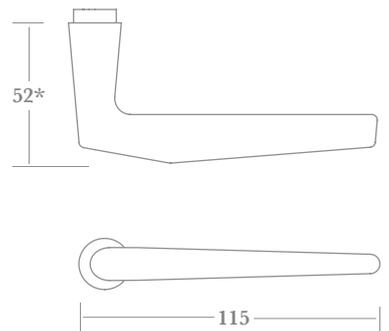

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers


Two classic Regency Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




RH shown

▲ 7762

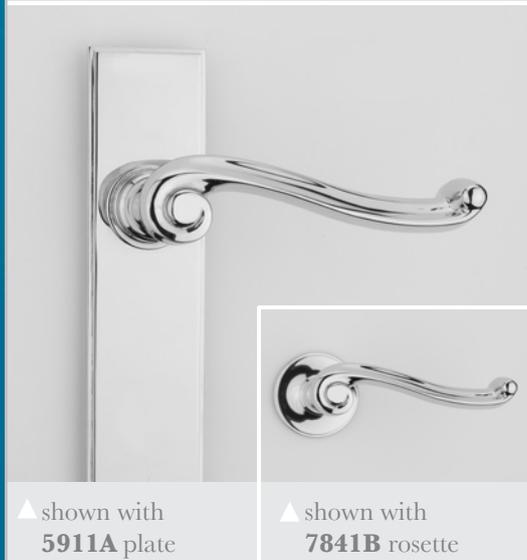

▲ shown with **5911A** plate

▲ shown with **7841B** rosette

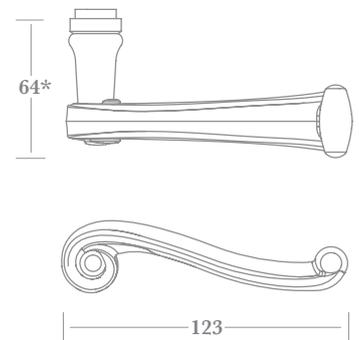

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.




RH shown

▲ 7767



▲ shown with **6011A** plate

▲ shown with **7834B** rosette

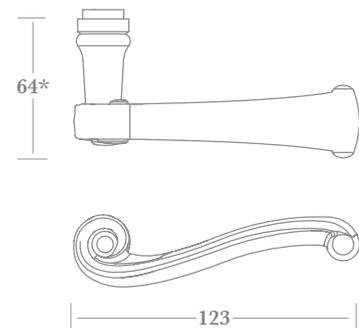

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

# Door Levers

Two classic Edwardian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




RH shown

▲ 7761



▲ shown with **6011A** plate

▲ shown with **7822B** rosette

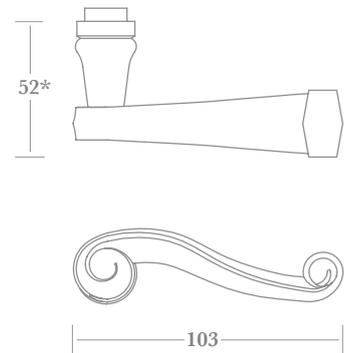


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

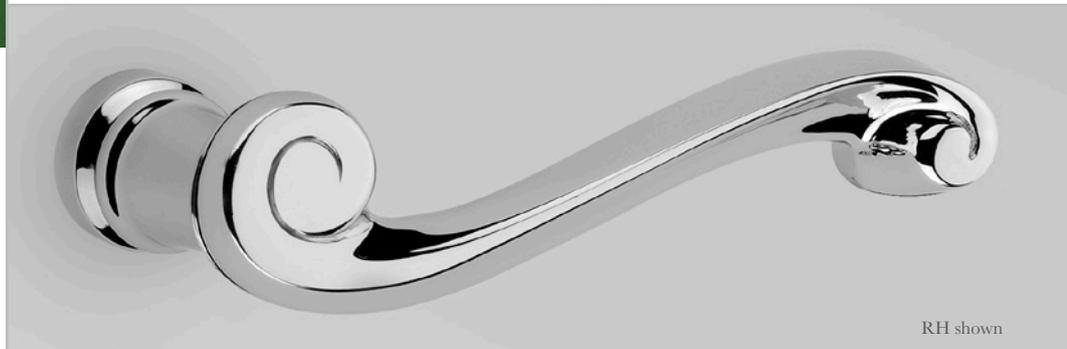


RH shown

▲ 7766



▲ shown with **5911A** plate

▲ shown with **7847B** rosette

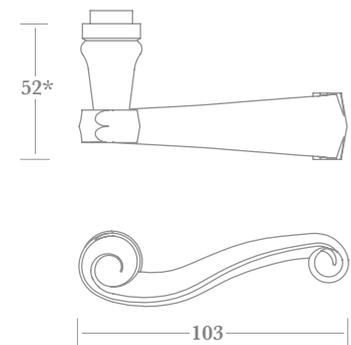


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic Georgian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

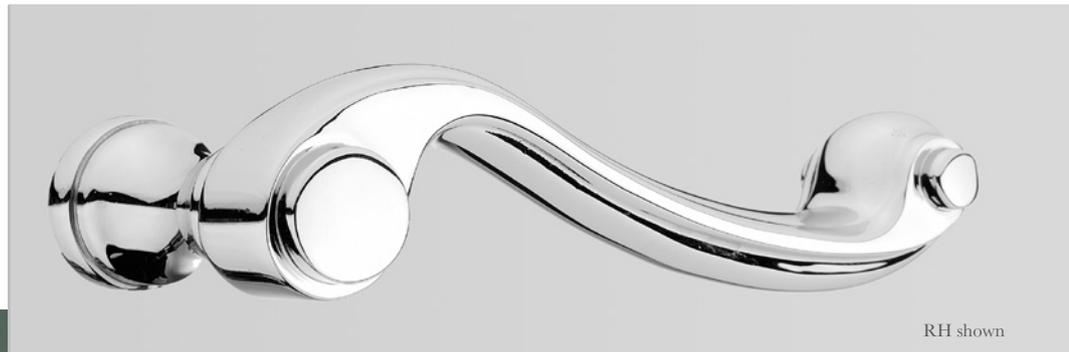


RH shown

▲ 7720



▲ shown with **6011A** plate

▲ shown with **7847B** rosette

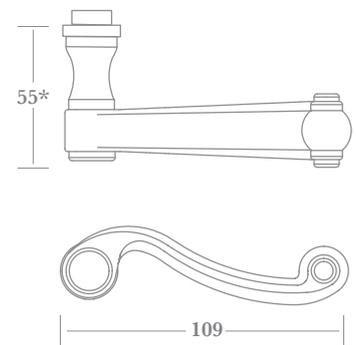

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.




RH shown

▲ 7724



▲ shown with **5911A** plate

▲ shown with **7834B** rosette

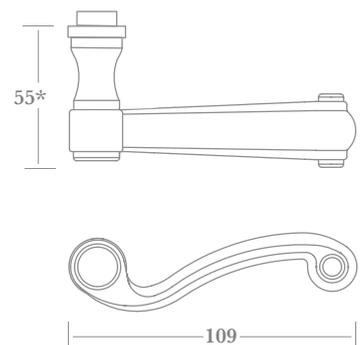

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Lever

An Art Deco inspired Door Lever designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

Restricted availability - please contact us for further information




RH shown

▲ 7730



▲ shown with 3221B plate

▲ shown with 7842B rosette

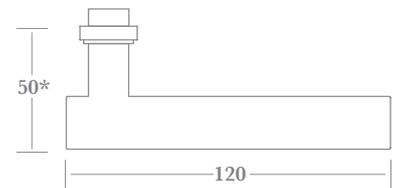

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

.....